


Enigma Readback

Quick Reference Guide – IXD-701-QRG-044/4.1

9 November 2020

1. From the PC run the *Enigma* software by clicking on the desktop icon or programs menu

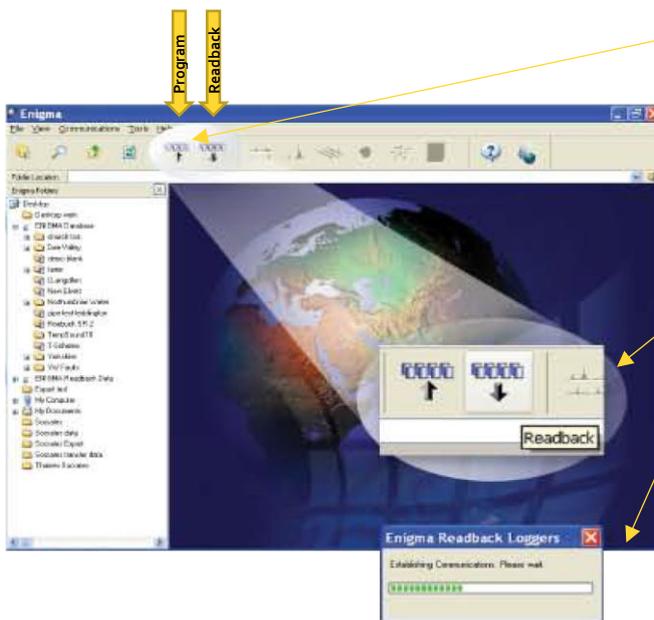


2. These two buttons are the logger **Program** and **Readback** buttons
(The *Enigma* case lid must be closed when Programming or Reading back loggers via the software)

3. Ensure the USB communications cable is connected. Click on the **Readback** button which will produce the following progress box




4. The status window indicates how many loggers have been found in the case and asks for confirmation before progressing to the *Enigma* Readback wizard shown overleaf

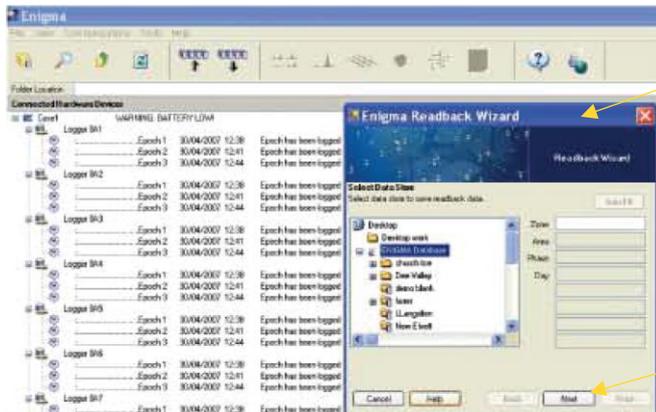

5. The Readback wizard indicates the location it is going to store the data in the **ENIGMA Database**. It will ask for a Location name or 'Zone'. This can be a DMA reference number or name, etc



It is possible to enter Zone – Area – Phase, etc. The minimum entry is the Zone field

6. After entering a Zone name, etc (above) click on the **Next** button

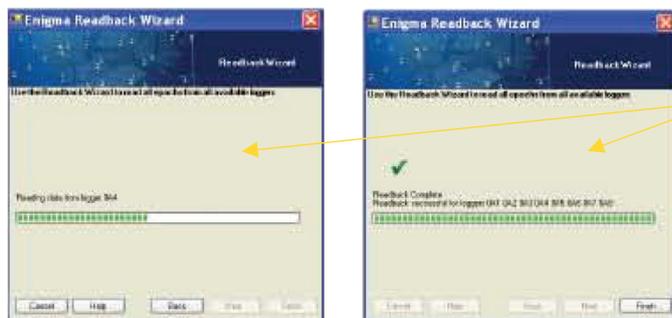

7. These dialogue/progress boxes appear.

Then the dialogue box below

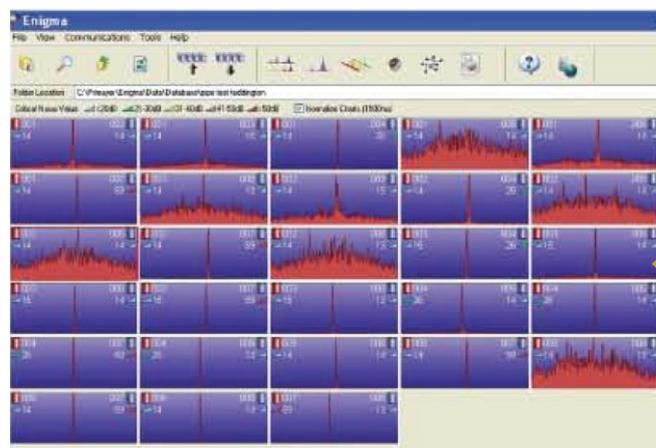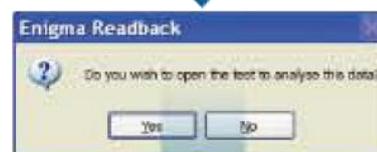

8. The **leak noise data** may now be analysed